



Fixing problematic Fuel Sender due to too much play In float bar causing wipers to lose contact with tracks during operation in FZS1000 and FZS600 Foxeye  
Bar is held in place by a spring washer and pushing this in further tightens it up



Wipers in here

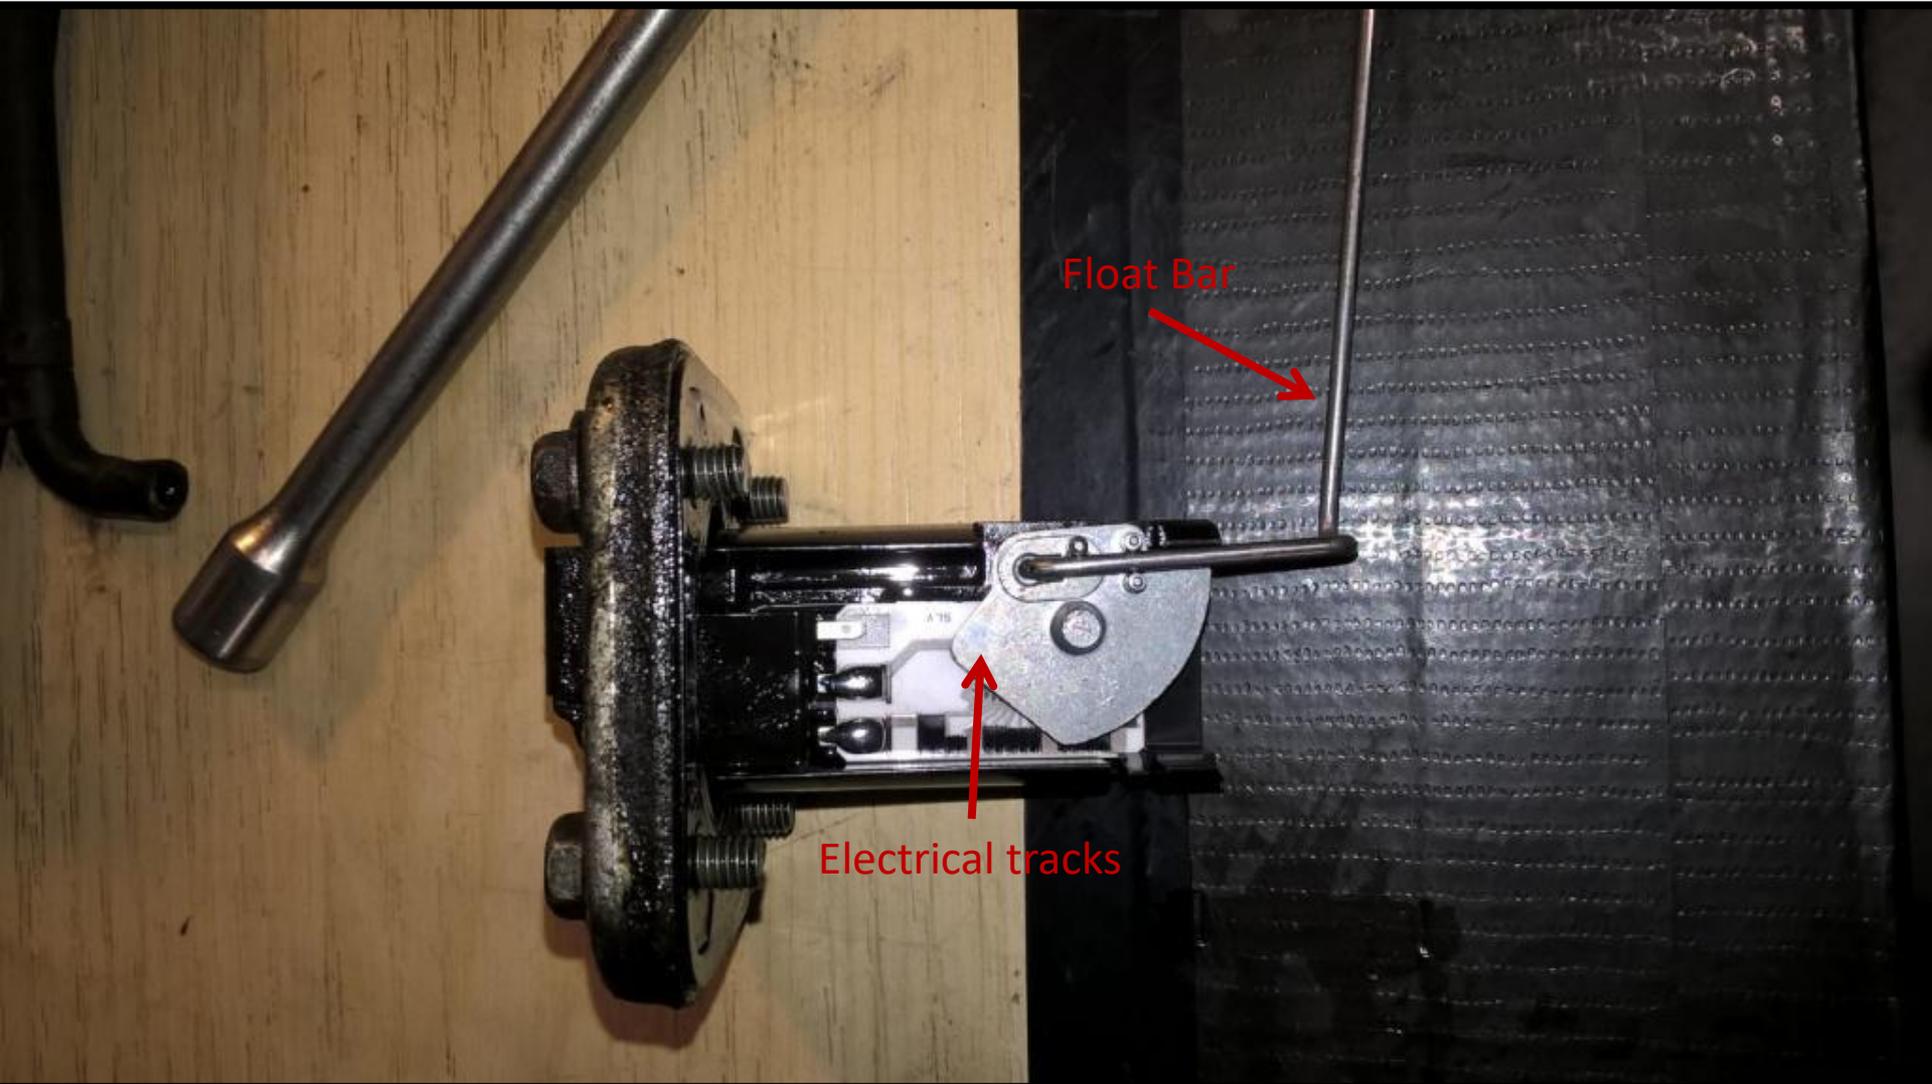

Open ended spanner under bar via slot

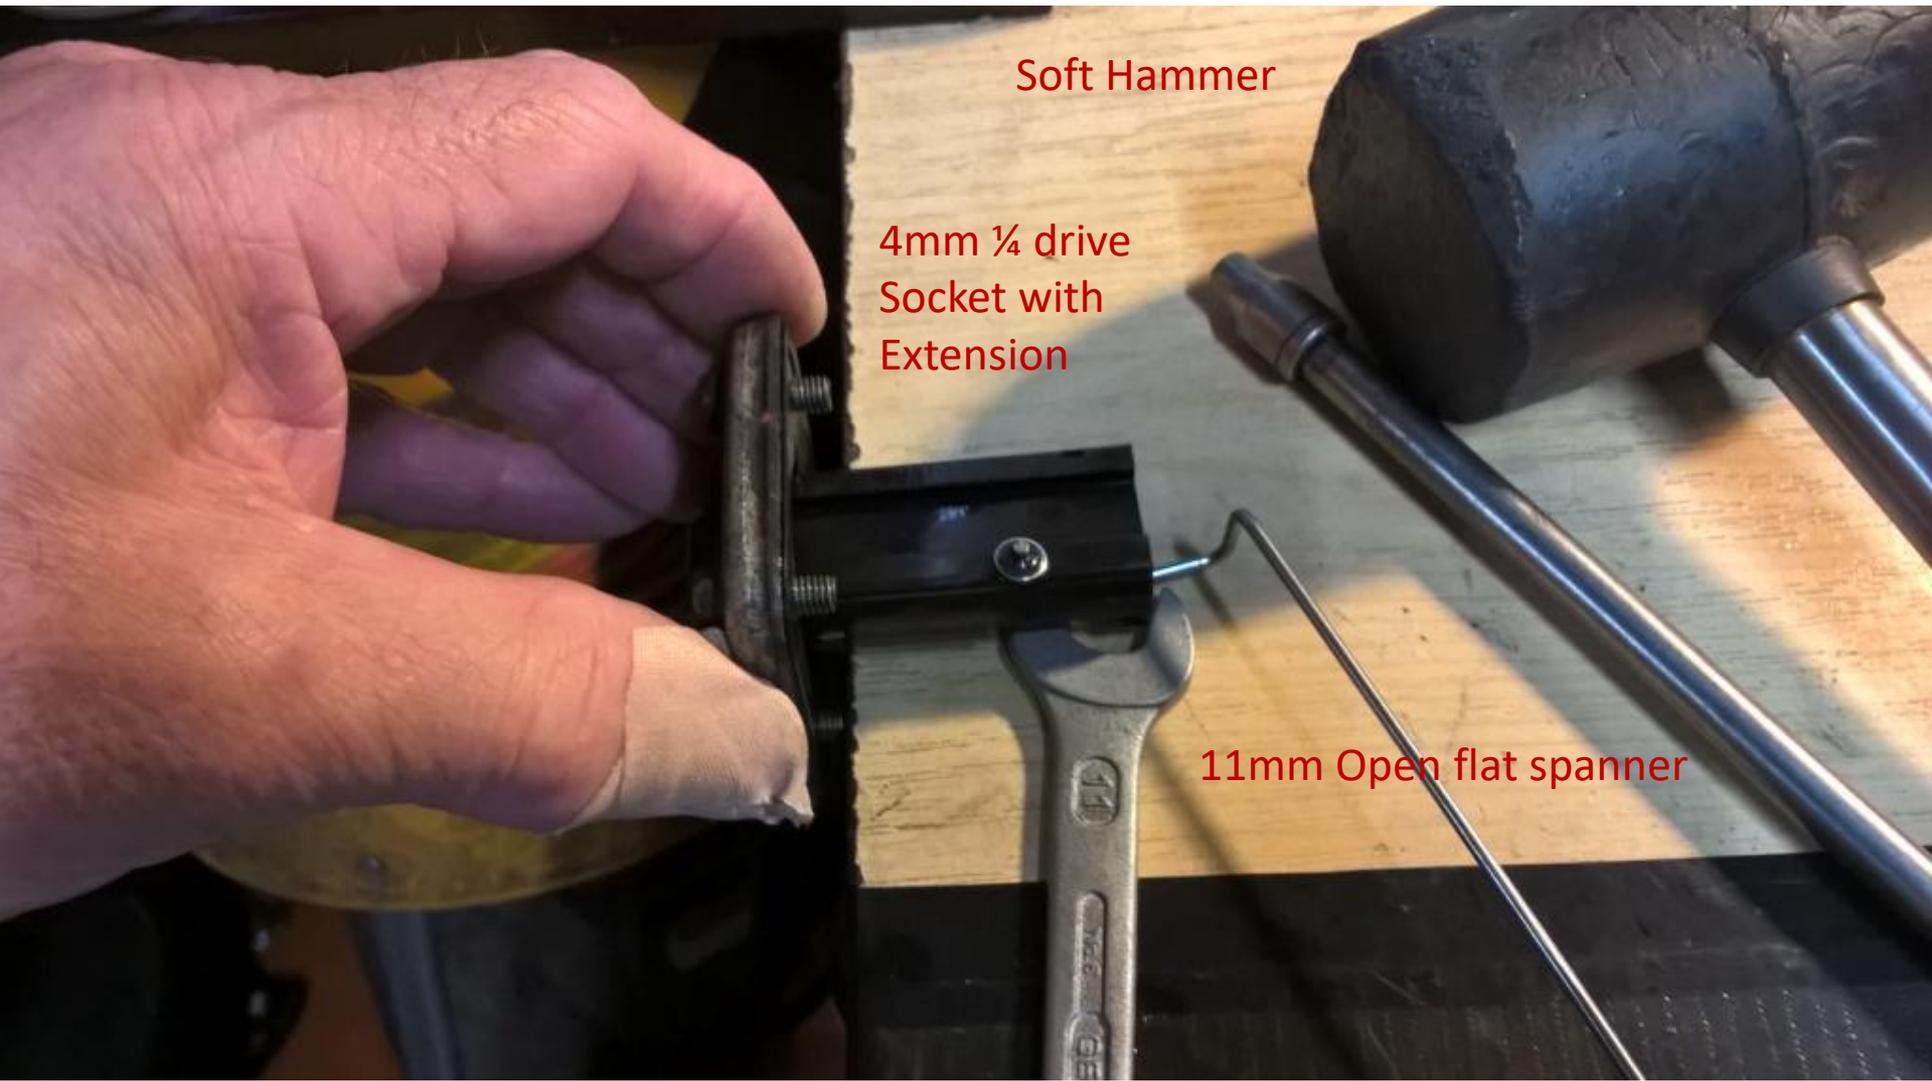

Soft Hammer

4mm 1/4 drive  
Socket with  
Extension

11mm Open flat spanner



Place socket on  
spring clip/washer

Give extension  
sharp tap with  
soft hammer if  
still loose repeat